

Installation Guide


Mounting

Designed specifically for outside air temperature measurement, this device comes in an aluminum LB enclosure.

For best results, locate the sensor on the north side of the structure (when located north of the equator) high under the eaves or another protected area to prevent incorrect readings from direct sunlight and damage due to the elements. Also, avoid proximity to other heat sources, power wires, or a large thermal mass.

1. Run 1/2" conduit through the wall.
2. Attach the conduit to the sensor enclosure's CW 1/2" NPT fitting with a suitable coupler (such as a Chase closed nipple).

NOTE: The sensor air holes must face down to prevent the accumulation of dirt or water.

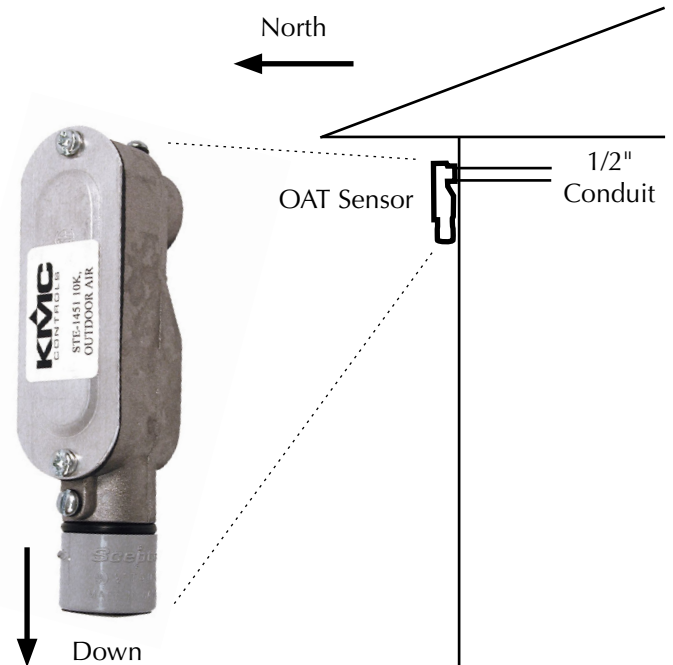

Connections and Wiring

1. Remove the two cover screws and cover.

NOTE: Removal of only one screw is required. The other screw can be loosened, and the cover can be swung out of the way.

2. Feed wires through the conduit opening.
3. Make connections to the two wire leads with either butt-splices or solder. (Using wire nuts is **not** recommended.) The two-wire sensor is not polarity sensitive.
4. Plug the conduit with sealant to prevent air infiltration.
5. Check that the rubber weather gasket is placed correctly between the enclosure and cover.
6. Reinstall the cover and tighten the screws to create a weather-resistant seal.

Maintenance

No routine maintenance is required. Each component is designed for dependable, long-term reliability and performance. Careful installation will also ensure long term reliability and performance. If dirt clogs the air holes at the bottom, remove it.

Specifications

Sensor	Type III thermistor, 10K ohm @ 77° F (25° C)
Temperature Limits	-58 to 212° F (-50 to 100° C)
Wiring	22 AWG wire leads
Case	Aluminum LB (NEMA 4X and IP65)

Configuration

For controller configuration, see the [Type III Sensors Applications Guide](#) on the KMC web site.

Important Notices

The KMC logo and KMC Controls are registered trademarks of KMC Controls, Inc.

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of KMC Controls, Inc.

The material in this document is for information purposes only. **The contents and the product it describes are subject to change without notice.** KMC Controls, Inc. makes no representations or warranties with respect to this document. In no event shall KMC Controls, Inc. be liable for any damages, direct or incidental, arising out of or related to the use of this document.

More Information

For **additional information**, see the [STE-1400 Series Data Sheet](#) on the KMC web site.

For **troubleshooting, controller configuration, and other information**, see the [Type III Sensors Applications Guide](#) on the KMC web site.



KMC Controls, Inc.
19476 Industrial Drive
New Paris, IN 46553
574.831.5250
www.kmcccontrols.com
info@kmcccontrols.com